


# STAGE 2a

Excavate Basin by extending fingers from the eastern breakwater



# STAGE 2b

Construct Cofferdam approx 123 m  
12 m boat access along Eastern BW

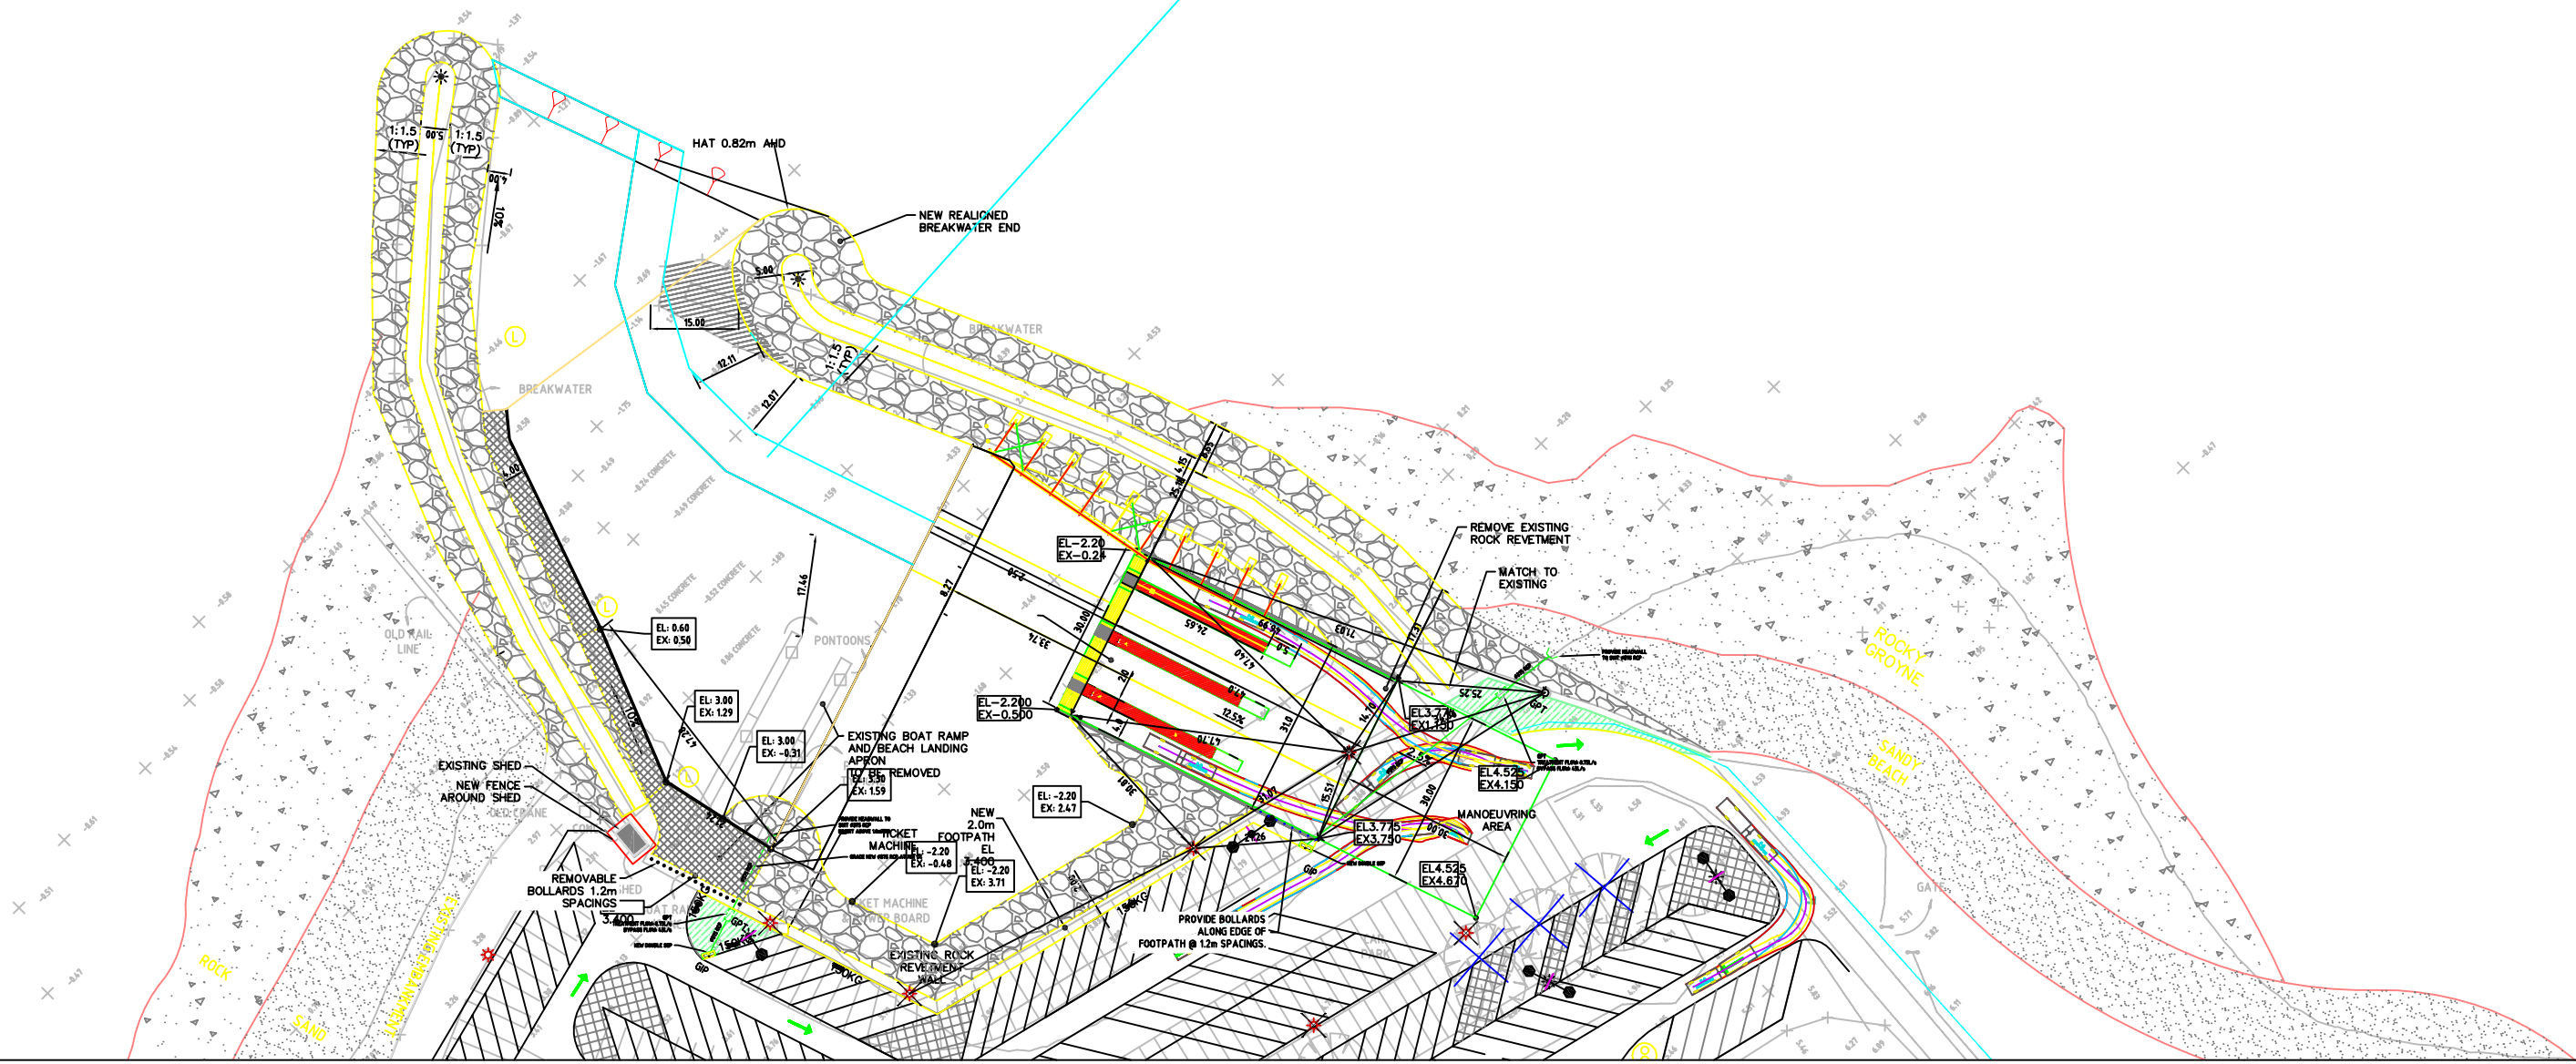



# STAGE 2c

Excavate basin along Western BW  
Install Wharf

